

Centro Display Pod

Assembly Instructions



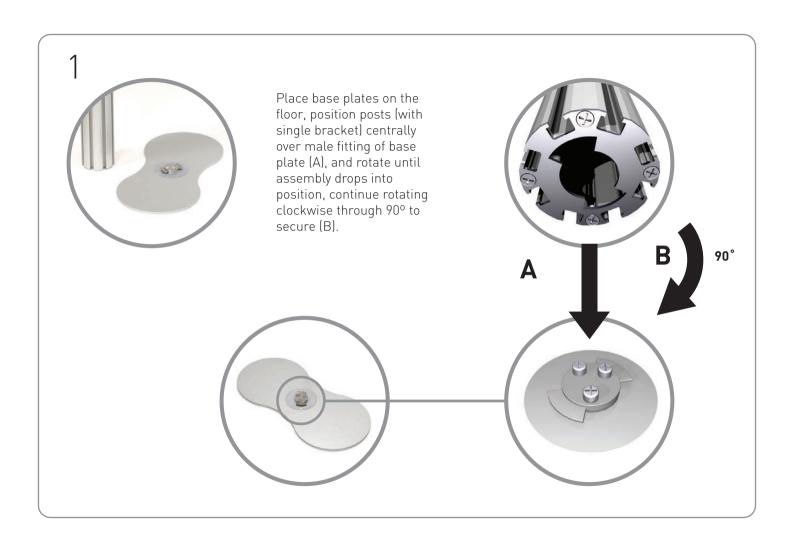

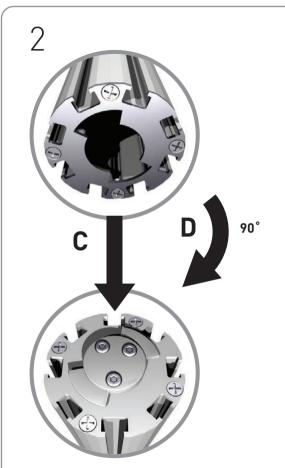

Affix posts (with two brackets) to lower posts by positioning female end centrally over male fitting (C), and rotate until assembly drops into position, continue rotating clockwise through 90° to secure (D). Ensure that all shelf brackets are aligned on one side of the posts (as shown right).







Position post assemblies facing one another with aligned shelf brackets inwards. Connect post assemblies by attaching one of the straight 616mm profiles to the bottom, parallel to the shelf brackets. Slot clamps of profile into post channels and tighten screws with hex key supplied to secure.



Pre-assemble the two black acrylic shelves to 616mm profiles by aligning the predrilled holes, inserting 4 off countersunk self-tapping screws, and tightening with cross-head screwdriver supplied to secure.







With the black acrylic uppermost, slide first assembly into the same post channels as the bottom profile, until the expanding clamps rest on the pre-installed locator bars of the bottom posts. Tighten grub screws in ends of profile to secure in position.



Ensuring the black acrylic is lowermost, slide and raise second assembly into the same post channels as the previous enclosure until the expanding clamps come into contact with the bottom of the pre-installed locator bars of the upper posts. Tighten grub screws in ends of profile to secure in position.









Ensure shelf brackets are in their open position by loosening screw in underside. Slide shelf between jaws of bracket and using scribed lines, ensure shelf is positioned centrally. Tighten screws in brackets to securely clamp shelf. Repeat for remaining two shelves.



